

DESIGN 911
Centre for Porsche

Fitting instructions

EVC I-Drive Wind Booster

Part no: ETB100010



Tools Requires:

No 2 Philips screw driver

INSTRUCTIONS:

1. Pull Throttle pedal forward to reveal throttle pedal assembly.



2. Pull Throttle pedal forward to reveal throttle pedal assembly.



3. Lift pedal unit upwards to release from bracket.




4. Disconnect connector from top of pedal unit.



5. Pull carpet forward slightly and re-route pedal connector to appear at top of carpet.



6. From I-Drive box take the piece of loom and connect to throttle pedal connector.

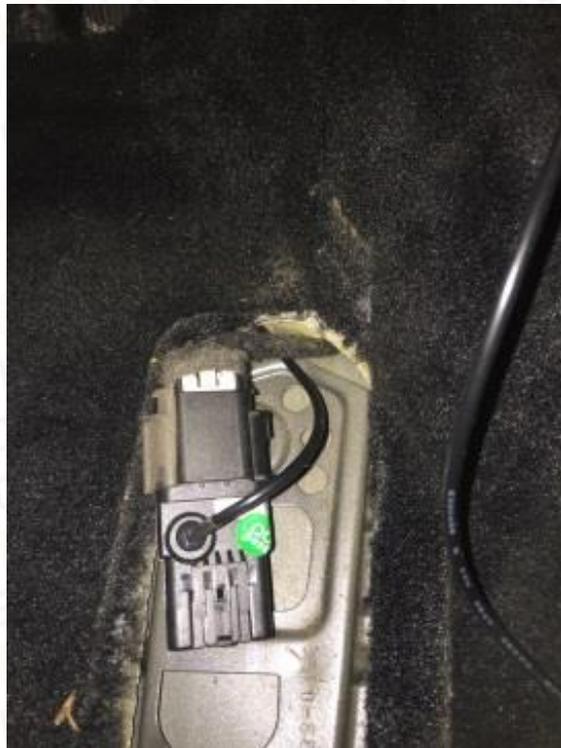

7. Run the loom behind the carpet so the small connector appears by the foot rest and centre console.



8. Take the display unit from the Box, Unpeel the sticky back and stick to dashboard. In this case just to the lower left of the steering wheel.



9. Run the wiring from the unit down behind between the dash and centre console so the small connector appears by the small connector of the loom next to the centre console and foot rest.



10. Connect the 2 small connectors and tuck behind the carpet so it's tidy.
11. Plug the throttle pedal connector back into the throttle pedal and refit pedal to vehicle
12. Turn on ignition and follow instructions from instruction book in kit of how to set up.

Any enquiries please email: keith@design911.com